

## Partner Release Table

To receive beeps on any Partner system (must be active on a line), press <Feature><#><1>.

To receive system release on a display phone (Partner ACS/Endeavor only): Press <Feature><5><9>.

Release	Partner Basic	Partner Plus	Partner II	Partner ACS	Partner Endeavor (Small)	Partner Endeavor (Large)
1.0	1 beep	2 beeps	2-1 beeps	5-1 beeps P ACS R1.0	2-1-1 beeps P ECS-S-R1.0	2-2-1 beeps P ECS-L-R1.0
1.1				5-1 beeps P ACS R1.1		
2.0	3 beeps	4 beeps	2-2 beeps	5-2 beeps P ACS R2.0.1	2-1-1 beeps P ECS-S-R1.0.1	2-2-1 beeps P ECS-L-R1.0.1
3.0	1-3 beeps	2-4 beeps	3-1 beeps	5-3 beeps P ACS R3.0		
3.1	1-3 beeps	1-2 beeps	1-4 beeps			
4.0	2-3 beeps	3-2 beeps	3-3 beeps	5-4 beeps P ACS R4.0		
4.0.1			3-4 beeps			
4.1	4-1 beeps	4-2 beeps	4-3 beeps			
5.0				5-5 beeps P ACS R5.0		

For updates or changes, contact Chris Guenther: [chrisgue@avaya.com](mailto:chrisgue@avaya.com)

Last updated 2/28/02